


**Dryer**

**TKF 8451**

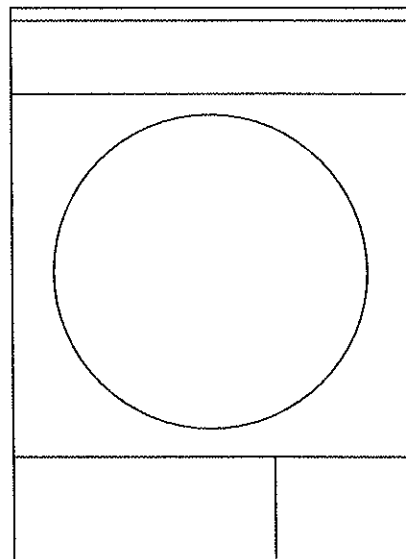

**User manual**

**Blomberg**

# Please read this user manual first!

Dear Customer,

We hope that you get the best results from the product which has been manufactured in state-of-the-art plants and passed through a strict quality control procedure.

Therefore, please read the entire user manual carefully before using the product and keep it as a reference for future use. In case of transferring the product to someone else, give the manual as well.

## The user manual will help you use your product in a fast and safe way.

- Read the user manual before installing and starting your product.
- Always follow the safety instructions.
- Keep this user manual within easy reach for future reference.
- Read also the other documents supplied with the product.

Remember that this user manual is also applicable for several other models. Differences between models will be identified in the manual.

## Explanation of symbols

Throughout this user manual the following symbols are used:



Read the Instructions.



Important information or useful hints about usage.



Warning for hazardous situations with regard to life and property.



Warning for electric shock.



Warning for fire hazard.



Warning for hot surfaces.


# TABLE OF CONTENTS

<b>1 Your Dryer</b>	<b>4</b>
Overview .....	4
Technical Specifications .....	5
<b>2 Important safety instructions</b>	<b>6</b>
General safety .....	6
Intended use .....	8
Children's safety .....	8
Compliance with the WEEE Directive and Disposing of the Waste Product:.....	8
Compliance with RoHS Directive: .....	8
Package information .....	8
<b>3 Installation</b>	<b>9</b>
Appropriate installation location .....	9
Removing the transportation safety assembly .....	9
Under counter installation .....	10
Mounting over a washing machine.....	10
Connection to water drain; .....	10
Adjusting the feet.....	10
First use .....	11
Disposing of packaging material .....	11
Transportation of the machine .....	11
Disposing of the old machine.....	11
Warnings about sounds.....	11
<b>4 Electrical Connection</b>	<b>12</b>
Attention!.....	12
Electrical requirements.....	12
Fitting a different plug .....	12
Washer/dryer combination.....	13
<b>5 Preparations for drying</b>	<b>14</b>
Things to be done for energy saving ..	14
Laundry suitable for drying in the machine .....	14
Laundry unsuitable for drying in the machine .....	14
Preparing laundry for drying.....	15
Correct load capacity .....	15

<b>6 Selecting a Programme and Operating Your Machine</b>	<b>17</b>
Control panel.....	17
Preparing the machine.....	18
Programme selection.....	18
Programme selection and consumption table .....	20
Auxiliary function.....	21
Dryness level .....	21
Anti-creasing .....	21
Changing the contrast .....	21
Changing the delay time .....	22
Canceling the time delay .....	22
Starting the programme.....	22
Progress of programme.....	23
Changing the programme after it has started.....	23
Child-proof lock.....	23
Canceling the programme .....	24
End of programme .....	25
<b>7 Maintenance and cleaning</b>	<b>26</b>
Lint Filter / Loading Door Inner Surface.....	26
Cleaning the sensors .....	26
Draining the water tank;.....	27
Cleaning the filter drawer .....	27
Cleaning the evaporator.....	29
<b>8 Troubleshooting</b>	<b>31</b>
<b>9 Guarantee</b>	<b>32</b>
<b>10 Service</b>	<b>33</b>

# 1 Your Dryer

## Overview

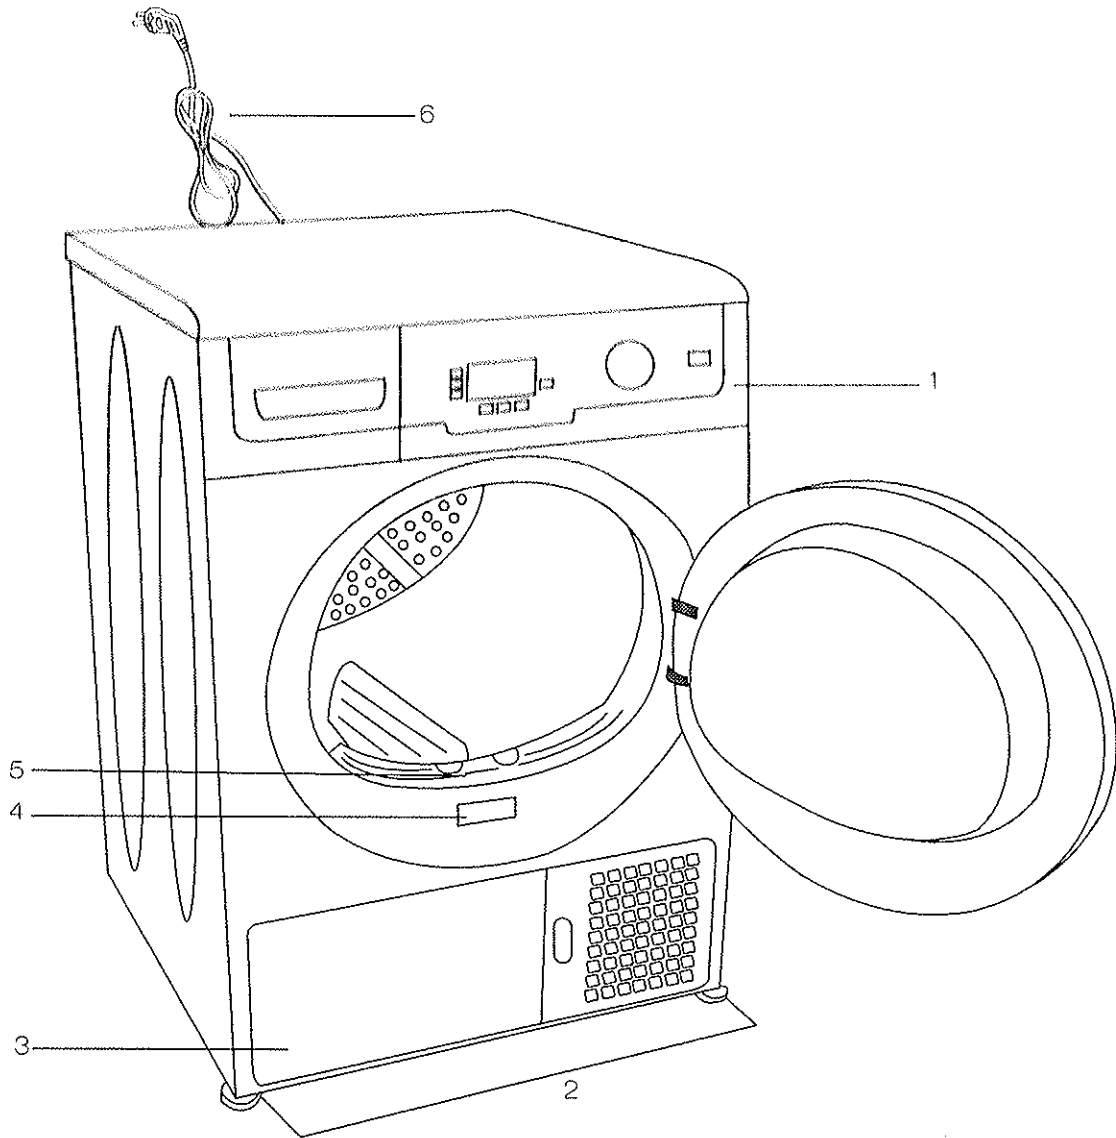

1- Control panel

2- Adjustable feet

3- Kick plate

4- Rating plate

5- Fluff filter

6- Power cord

## Technical specifications

EN

Height (adjustable)	84,6 cm
Width	59,5 cm
Depth	59,8 cm
Capacity (max.)	8 kg
Net weight (plastic front door usage)	52 kg
Net weight (glass front door usage)	54,5 kg
Voltage	See type label
Rated power input	
Model code	

Type label is located behind the loading door.

Specifications of this appliance may change without notice to improve the quality of the product. Figures in this manual are schematic and may not match your product exactly. Values stated on the machine labels or in the documentation accompanying it are obtained in laboratory in accordance with the relevant standards. Depending on operational and environmental conditions of the appliance, values may vary.

## 2 Important safety instructions


This section contains safety instructions that will help protect from risk of personal injury or property damage. Failure to follow these instructions shall void any warranty.


### General safety

- Never place the product on a carpet-covered floor; otherwise, lack of airflow beneath the machine will cause electrical parts to overheat. This will cause problems with your product.
  - Do not operate the product if the power cable / plug is damaged. Call the Authorised Service Agent.
  - Do not make any changes on the plug supplied with the product. If it is not compatible with the socket, have a qualified electrician change the socket with a suitable one.
  - Never touch the plug with wet hands! Never unplug by pulling on the cable, always pull out by gripping the plug.
  - Connect the product to a grounded outlet protected by a fuse of suitable capacity as stated in the technical specifications table.
  - Power cable of this product is equipped with a conductor and a grounding plug that allows for grounding the product. This plug must be inserted into a socket which is installed and grounded in accordance with the local laws and regulations. Grounding installation decreases the risk of electric shock by opening a path with low resistance for the electricity flow in case of a malfunction or failure. Do not neglect to have the grounding installation made by a qualified electrician. If you have any suspect about the grounding installation, have it checked by a qualified electrician.
- Our company shall not be liable for any damages that will arise when the product is used without grounding in accordance with the local regulations.
- The product should not be plugged in during installation, maintenance, cleaning and repair works.
  - Always have the repair procedures carried out by the Authorised Service Agent. Manufacturer shall not be held liable for damages that may arise from procedures carried out by unauthorised persons.
  - Do not use electrical devices in the product.
  - You must provide enough ventilation in order to prevent gases exiting from devices operating with other types of fuels including the naked flame from accumulating in the room due to the back fire effect.
  - Items cleaned or washed with gasoil/fuel oil, dry-laundry solvents and other combustible or explosive materials as well as the items that are contaminated or spotted with such materials should not be dried in the product since they emit flammable or explosive vapor.
  - Pay attention that the air inlet openings are unobstructed.
  - Do not dry the laundry cleaned with industrial chemicals in the dryer.
  - Underwear that contains metal reinforcements should not be dried in the dryer. Dryer can get damaged if metal reinforcements come loose and break off during drying.
  - Never attempt to repair the product yourself. Do not perform any repair or replacement procedures on the product even if you know

or have the ability to perform the required procedure unless it is clearly suggested in the operating instructions or the published service manual. Otherwise, you will be putting your life and others' lives in danger.

- For failures that you cannot remedy by applying the procedures in safety instructions, turn off and unplug the product and call the Authorised Service Agent.
- Do not reach into the machine when the drum is spinning.
- Do not use extension cords, multi-plugs or adaptors to connect the dryer to power supply in order to decrease the risk of fire and electric shock.
- Never wash the product by spreading or pouring water onto it! There is the risk of electric shock!

 The final step of the drying programme, namely the cool-down step is performed without applying heat to ensure that the laundry items are kept at a temperature that will not damage them. If you open the loading door before the cool-down step completes, hot vapour will come out.

-  Never stop the dryer before the programme completes. If you must do this, remove all laundry quickly and lay them out to a suitable place to dissipate the heat.
- Always clean the lint filter before or after each loading. Never operate the dryer without the lint filter installed.
  - Clean ventilation grid of the product regularly. Do not allow fibre, dust and dirt accumulation around the ventilation grid and at adjacent areas.
  - Power cable plug must be within easy reach after installation.

- Do not dry unwashed items in the dryer.
- Items soiled with cooking oils, acetone, alcohol, fuel oil, kerosene, stain removers, turpentine, paraffin and paraffin removers must be washed in hot water with plenty of detergent before being dried in the dryer.
- Garments or pillows bolstered with rubber foam (latex foam), bathing caps, water resistant textiles, materials with rubber reinforcement and rubber foam pads should not be dried in the dryer.
- Do not use fabric softeners and anti-static products unless they are recommended by the manufacturers of the relevant product.
- Use softeners, anti-static products and etc. in accordance with the instructions of their manufacturers.
- Do not install the product behind a door with a lock, sliding door or a hinged door which can strike the product.
- Do not install or leave the dryer in places where it will be exposed to outdoor conditions.
- Your product can be operated at temperatures between +5°C and +35°C. If the operating conditions fall outside of this range, operation of the product will be adversely affected and it can get damaged.
- Do not tamper with the controls.
- Unplug the product when it is not in use.
- Remove the loading door of the drying compartment before decommissioning or disposing of the product.
- Check all garments before loading and make sure that there is no any lighters, coins, metal pieces, needles,

- and etc. in their pockets or on them.
- Make sure that the pets do not enter into the product. Check the drum of the product before using it.
- Make sure that original spare parts and accessories are used during maintenance works.
- Do not lean on the loading door when it is open. The product may tip over.
- Remove all objects from pockets such as lighters and matches.
- When your machine is not in use or when you unload the laundry after completion of drying process, turn the machine off with the On/Off button. In cases where the On/Off button is in On position (while the machine is energized), keep the loading door closed.

### Intended use

- This product has been designed for domestic use. It should not be used for other purposes.
- Product must only be used for drying of textiles that are marked accordingly.
- Dry only those articles in your product that are stated in this manual.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.


### Children's safety

- Electrical products are dangerous for the children. Keep children away from the product when it is operating. Do not let them tamper with the product.
- Do not allow children sit/climb on or enter in the product.
- Do not forget to close the loading door when leaving the room where

the product is located.

- Packaging materials are dangerous to children. Keep the packaging materials out of reach of children or dispose of them by classifying according to waste directives.

### Compliance with the WEEE Directive and Disposing of the Waste Product:

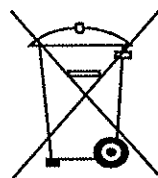

This product complies with EU WEEE Directive (2012/19/EU).

This product bears a classification symbol for waste electrical and electronic equipment (WEEE).

This product has been manufactured with high quality parts and materials which can be reused and are suitable for recycling. Do not dispose of the waste product with normal domestic and other wastes at the end of its service life. Take it to the collection center for the recycling of electrical and electronic equipment. Please consult your local authorities to learn about these collection centers.

### Compliance with RoHS Directive:

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

### Package information

Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.



## 3 Installation

To make the product ready for use, make sure that the electricity and water drainage system are appropriate before installation. If they are not, call a qualified technician and plumber to have any necessary arrangements carried out.

**i** Preparation of the product's location as well as the electrical and waste water installations is the customer's responsibility.

**i** Manufacturer shall not be held liable for damages that may arise from procedures carried out by unauthorised persons.

**!** Prior to installation, visually check if the product has any defects on it. If so, do not have it installed. Damaged products cause risks for your safety.

**!** The appliance should be transported only in a vertical upright position. If during the course of transport the appliance has to be transported horizontally, it must only be laid on its right hand side. After bringing it to upright position, it must not be operated for at least 12 hours to allow the system to settle. Failure to comply with the above instructions could result in damage occurring to the appliance. The manufacturer will not be held responsible if these instructions are disregarded.

### Appropriate installation location


- Install the product on a stable and level surface.
- Dryer is heavy. Do not move it by yourself.
- Operate your product in a well ventilated, dust-free environment.
- Do not block the air ducts in front of and under the product with materials

such as long pile rugs or wooden plinths.

- Do not install the product behind a door with a lock, sliding door or a hinged door which can strike the product.
  - Once the product is installed, it should stay at the same place where its connections have been made. When installing the product, make sure that the rear wall of it does not touch anywhere (tap, socket, etc.). Also pay attention to select an installation location which you will not be required to change afterwards.
  - Place the product at least 1.5 cm away from the edges of other furniture.
- !** Do not place the product on the power cable.

### Removing the transportation safety assembly

- !** Remove the transportation safety assembly before using the product for the first time.
1. Open the loading door.
  2. There is a nylon bag inside the drum that contains a piece of styrofoam. Hold it from its section marked with XX XX.
  3. Pull the nylon towards yourself and remove the transportation safety assembly.

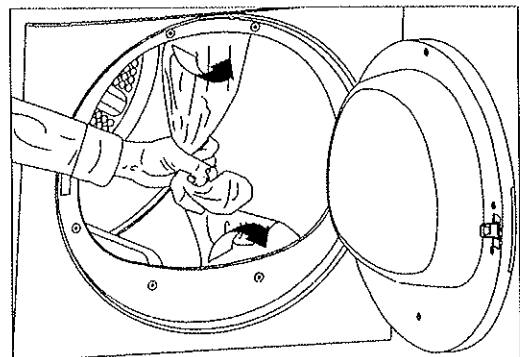



- ⚠ Make sure that no part of the transportation safety assembly remains inside the drum.

## Under counter installation

- This product can be installed under a counter if the height of the counter is sufficient.

- ⚠ Never operate the dryer without the top trim is in place.

- Leave at least 3 cm of space around the sides and the rear wall of the product when installing it under a counter.

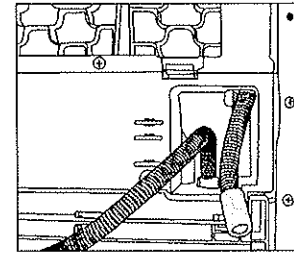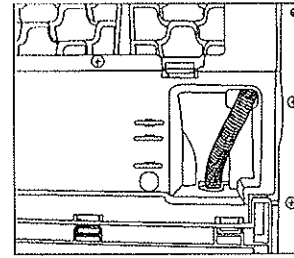

## Mounting over a washing machine

- A fixing device should be used between the two machines when installing the dryer above a washing machine. The fixing device can usually be obtained from a specialist retailer.
- Total weight of the washing machine and the dryer -with full load- when they are placed on top of each other reaches to approx. 180 kilograms. Place the products on a solid floor that has sufficient load carrying capacity!

## Connecting to the drain

In products equipped with condenser unit, water accumulates in the water tank during the drying cycle. You should drain accumulated water after each drying cycle.

You can directly drain accumulated water through the water drain hose supplied with the product instead of periodically draining the water collected in the water tank.

## Connecting the water drain hose

1. Pull hose in the product by hand in order to disconnect it from where it is connected. Do not use any tools to remove the hose.
2. Connect one end of the drain hose supplied separately with the product to the connection point from where you removed the hose of the product in previous step.
3. Connect the other end of the drain hose directly to the wastewater drain or to the washbasin.

- ⚠ Hose must be securely fixed to prevent leaks. Your house will be flooded if the hose comes loose during water discharge.


**i** Water drain hose should be attached to a height of maximum 80 cm.

**i** Make sure that the water drain hose is not stepped on and it is not folded between the drain and the machine.

## Adjusting the feet

In order to ensure that the product operates more silently and vibration-free, it must stand level and balanced on its feet. Balance the machine by adjusting the feet.

Turn the feet to left or right until the machine stands level and firmly.

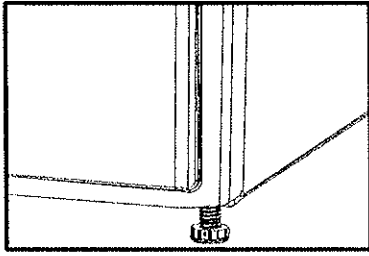

**i** Never remove the adjustable feet from their housings.

### First use

Before starting to use the product, make sure that all preparations are made in accordance with the instructions in sections “Important safety instructions” and “Installation”.

### Disposing of packaging material

Packaging materials are dangerous to children. Keep packaging materials in a safe place away from reach of the children.

Packaging materials of the product are manufactured from recyclable materials. Dispose of them properly and sort in accordance with recycled waste instructions. Do not dispose of them with normal domestic waste.

### Transportation of the product

1. Unplug the product before transporting it.
2. Remove the water drain (if any).
3. Drain the water in the product completely.

**!** We recommend carrying the product in upright position. If it is not possible to carry the machine in the upright position, we recommend carrying it by tilting towards the right side when looked from the front. After the product is moved to its new place, you should wait for 12 hours before starting it.

### Disposing of the old product


Dispose of the old product in an environmentally friendly manner.

Refer to your local dealer or solid waste collection centre in your area to learn how to dispose of your product.


For children’s safety, cut the power cable and break the locking mechanism of the loading door so that it will be nonfunctional before disposing of the product.

### Warnings about sounds

**i** It is normal to hear metallic noise from the compressor sometimes during operation.

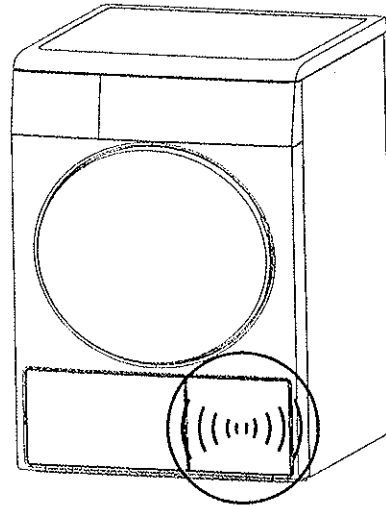

**i** Water collected during operation is pumped to water tank. It is normal to hear pumping noise during this process.

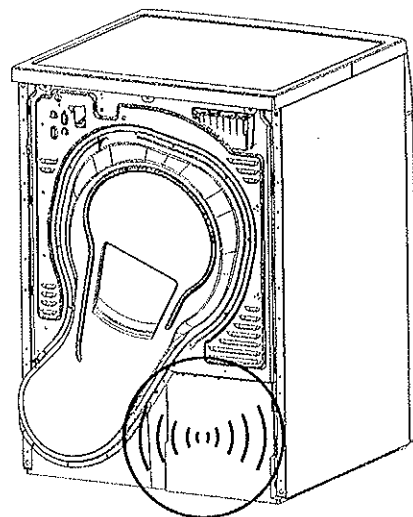

## 4 Electrical Connection

Make sure that you have an earthed power outlet socket rated at 13 amps (minimum).

### Attention!

If you use your dryer as built-in, the socket must be reachable after installation, or a separate switch (which can disconnect the two poles) must be used in the installation. Check for suitability.

For a permanent connection, a master switch with at least 3mm contact clearance and minimum 13 A rating must be used.

### Electrical requirements

Before you insert the plug into the wall socket make sure that the voltage and the frequency shown in the rating label corresponds to your electricity supply. We recommend that this appliance be connected to the mains supply via a suitable switched and fused socket in a readily accessible position.

Should the mains lead of the appliance become damaged or need replacing at any time, it must be replaced by a special purpose made mains lead which can only be obtained from a Authorised Service Agent.

### Warning

#### This appliance must be earthed

If the fitted moulded plug is not suitable for your socket, then the plug should be cut off and an appropriate plug fitted. The moulded plug on this appliance incorporates a 13A fuse. Should the fuse need to be replaced an ASTA approved BS1362 fuse of the same rating must be used. Do not forget to refit the fuse cover. In the event of losing the fuse cover, the plug must not be used until a replacement fuse cover has been fitted.

Colour of the replacement fuse cover must be the same colour as that visible on the pin face of the plug. Fuse covers are available from any good electrical store.

In order to avoid hazards, damaged supply cord should be replaced by the manufacturer, its service agent or similarly qualified people.


### Important

#### Fitting a different plug

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals on your plug, proceed as follows:

- 1 Connect the green - yellow or green (earth) wire to the terminal in the plug marked 'E' or with the symbol or coloured green and yellow or green.
- 2 Connect the blue (neutral) wire to the terminal in the plug marked 'N' or coloured black.
- 3 Connect the brown (live) wire to the terminal in the plug marked 'L' or coloured red.

With the alternative plugs a 13A fuse must be fitted either in the plug or adaptor or in the main fuse box. If in doubt contact a qualified electrician.

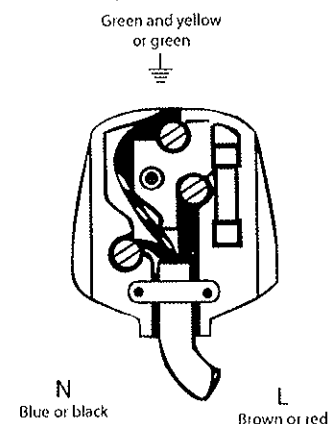

## **Washer/dryer combination**

Do not stack washing machine on top of the tumble dryer. This would damage both appliances and guarantees would become void. It is also unsafe to stack an appliance on top of another without using a suitable and approved stacking kit obtained from specialist retailers.

## 5 Preparations for drying

### Things to be done for energy saving


Following information will help you use the product in an ecological and energy-efficient manner.

- Operate the product at a capacity suitable for the programme you have selected and pay attention not to overload.
- Spin your laundry at the highest speed possible when washing them. Thus, the drying time is shortened and energy consumption is reduced.
- Dry the same type of laundry together.
- Follow the instructions in the user manual for programme selection.
- Leave sufficient clearance at the front and rear side of the dryer for air circulation. Do not block the ventilation grills at the front side of the product.
- Do not open the loading door of the machine during drying unless necessary. If you must certainly open the loading door, do not to keep it open for a long time.
- Do not add new (wet) laundry during drying.
- Lint and fibres released from the laundry to the air during the drying cycle are collected in the Lint Filter. Clean the lint filter before or after each drying cycle.
- Clean the filter drawer regularly either when the Filter Drawer Cleaning warning symbol appears or after every 5 drying cycles
- Ventilate the room, where the dryer is located, during drying.
- For models with lamp, keep the door closed if the On/Off button is pressed (if the machine is energized) when

machine is not in use.

### Laundry suitable for drying in the machine

- i** Always obey the instructions given on the garment tags. Dry only the laundry having a label stating that they are suitable for drying in a dryer and make sure that you select the appropriate programme.

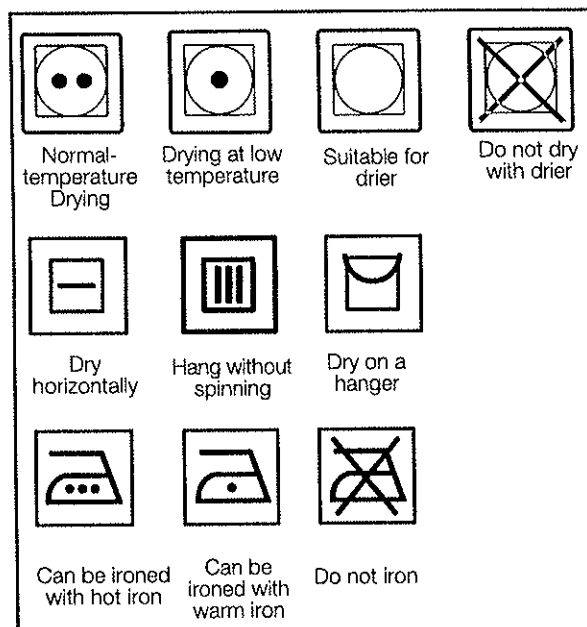

### Laundry unsuitable for drying in the machine

- Laundry and items stated below are not suitable for drying in a dryer:
- Laundry items with metal attachments such as metal buttons, metal reinforcements or belt buckles.
- Woollen or silk garments, nylon stockings, delicate embroidered fabrics and sleeping bags.
- Garments made of delicate and valuable fabrics.
- Fine net or voile curtains.
- Items made of hermetic fibres such as pillows and quilts.
- Very wet laundry items.
- Unwashed dirty laundry items.
- Laundry items containing rubber foam or rubber.

⚠ Items cleaned, washed or spotted with gasoil/fuel oil, dry-laundry solvents, industrial chemicals or other combustible or explosive materials should not be dried in the dryer.


⚠ Items soiled with cooking oils, acetone, alcohol, fuel oil, kerosene, stain removers, turpentine, paraffin and paraffin removers must be washed in hot water with plenty of detergent before being dried in the dryer.

### Preparing laundry for drying

- Check all garments before loading and make sure that there is no any lighters, coins, metal pieces, needles, and etc. in their pockets or on them.
- Laundry may be tangled after washing. Separate the laundry items before placing them into the dryer.
- Sort the laundry according to their types and thicknesses. Dry the same type of laundry together. For instance, thin kitchen towel and table cloths get dry earlier than the thick bath towels.

**i** Laundry must be spun at the highest spin speed that the washing machine allows on basis of the fabric type.

### Correct load capacity

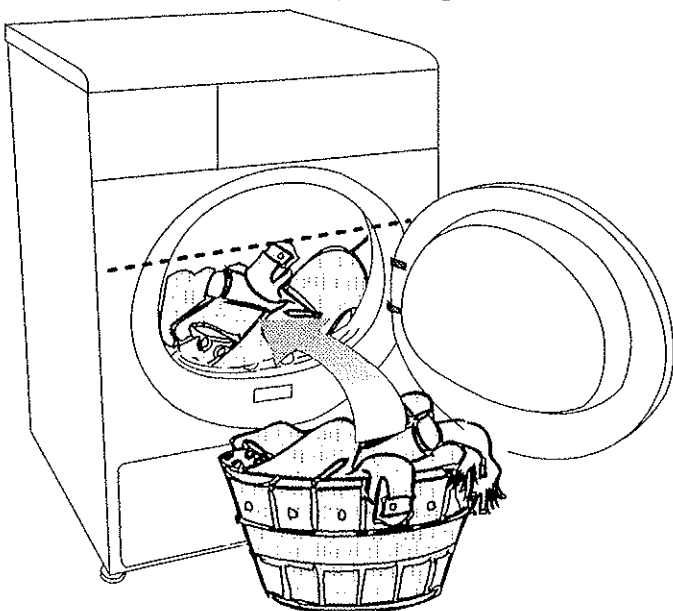

Follow the instructions in the “Programme selection and consumption table”. Do not

load more than the capacity values stated in the table.



**i** It is not recommended to load the dryer with laundry exceeding the level indicated in the figure. Drying performance will degrade when the machine is overloaded. Furthermore, dryer and the laundry can get damaged.

Following weights are given as examples.

Home articles	Approximate weights (g)
Cotton quit covers (double)	1500
Cotton quit covers (single)	1000
Bed sheets (double)	500
Bed sheets (single)	350
Large tablecloths	700
Small tablecloths	250
Tea napkins	100
Bath towels	700
Hand towels	350
Garments	Approximate weights (g)
Blouses	150
Cotton shirts	300
Shirts	200
Cotton dresses	500
Dresses	350
Jeans	700
Handkerchiefs (10 pieces)	100
T-Shirts	125

## Loading the laundry


1. Open the loading door.
  2. Place the laundry in the machine without compressing.
  3. Push the loading door to close.
- ⚠ Ensure that no items are caught in the door.

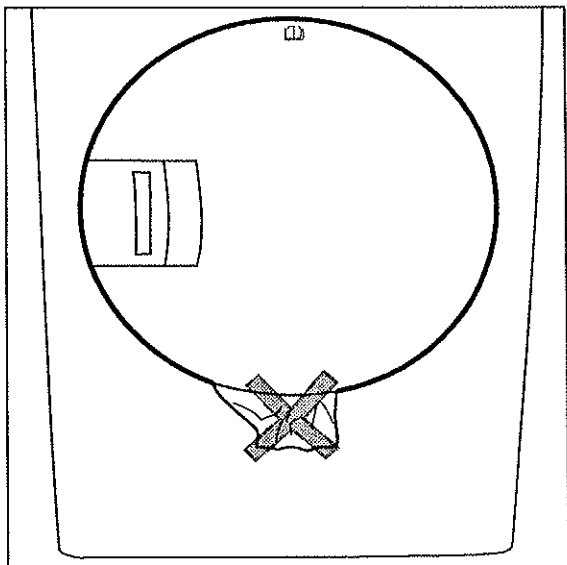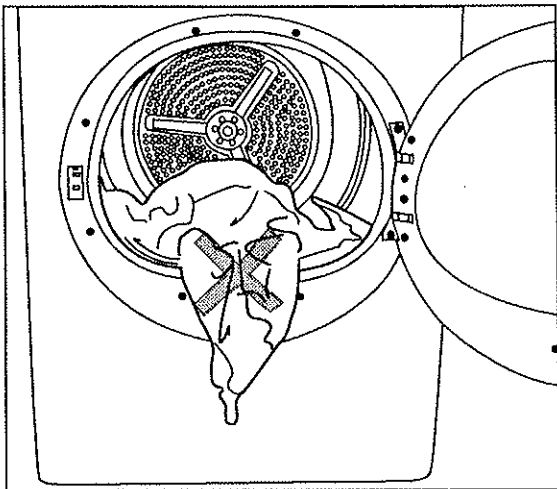




# 6 Selecting a Programme and Operating Your Machine

## Control panel

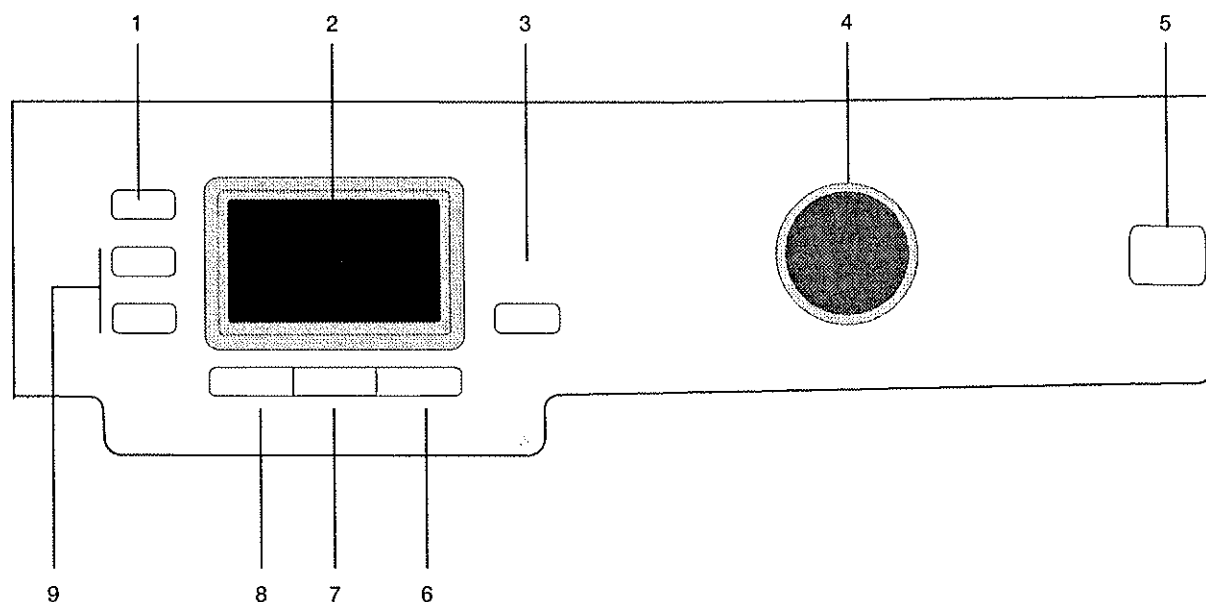

1. Washing Machine Spin Speed / Timer Programme Selection button
2. Display
3. Start / Pause / Cancel button
4. Programme Selection knob
5. On / Off button
6. Anti-creasing button
7. Dryness Level button
8. Cancel Audio Warning button
9. Time Delay buttons

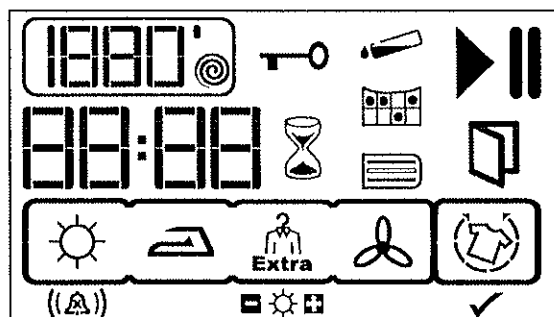

- Spin speed / Timer programmes\*
- Operation symbol
- Pause symbol
- Water Tank warning symbol
- Filter cleaning warning symbol
- Filter Drawer Cleaning warning symbol
- Remaining Time indicator\*\*
- Child-proof Lock warning symbol
- Time Delay mode
- Loading door open warning symbol
- Anti-creasing mode
- Audio Warning Level / Cancel Audio Warning
- Dryness Level
- Anti-creasing is activated

\* Spin speed is used to show the remaining time more accurately. It does not affect the performance of your machine.

\*\* Time that appears on display indicates the remaining time until the end of the programme and changes according to the dampness level of the laundry.

## Preparing the machine

1. Plug in the machine.
  2. Place the laundry in the machine.
  3. Press the On / Off button.
- i** Pressing the On / Off button does not necessarily mean that the programme has started. Press Start / Pause / Cancel button to start the programme.

## Programme selection

1. Decide the appropriate programme from the table below which includes drying levels.
2. Select the desired programme with the Programme Selection knob.

Extra Dry	Only the cotton laundry is dried at normal temperature. Thick and multi layered laundry (towels, linens, jeans and etc.) are dried in a way that they do not require ironing before being placed in the wardrobe.
Cupboard Dry	Normal laundry (tablecloths, underwear and etc.) are dried in a way that they do not require ironing before being placed in the wardrobe.
Iron Dry	Normal laundry (shirts, dresses and etc.) are dried ready to be ironed.

**i** For further programme details, see "Programme selection and consumption table".

## Main programmes

Depending on the fabric type, the following main programmes are available:

### • Cottons

Dry durable laundry with this programme. Dries at normal temperature. It is recommended to use for your cotton items (bed sheets, quilt covers, towels,

bathrobes, etc.).

### • Synthetics

Dry less durable laundry with this programme. Recommended for synthetics.

## Additional programmes

For special cases, following additional programmes are available in the machine.

**i** Additional programmes may differ according to the features of your machine.

### • Bedding

Dry only fibre quilts with machine-dryable label. Make sure you are loading the quilt in the correct way to avoid damages on the machine and the quilt. Take out the quilt cover before loading the quilt in the machine. Fold the quilt in two before loading.

- Do not load more than 1 double-size fibre quilt (200x200 cm). Do not dry items containing cotton such as quilts, pillows and etc.

- Do not dry items other than quilts such as carpets, rugs or mats. Permanent damage may arise in your machine.

**i** To obtain better results from your dryer, your laundry must be washed at suitable programmes and spun at the recommended spin speeds in the washing machine.

### • Shirts

This programme dries the shirts more sensitively and creases them less and thus, helps to iron them more easily.

**i** There may be a little moisture on the shirts at the end of the programme. We recommend you not to leave the shirts in the dryer.

### • Jeans

Use this programme to dry your jeans that are spun at high speeds in the washing machine.

### • Mix

Use this programme to dry non-

pigmenting synthetic and cotton laundry items together.

#### • **Sportswear**

Use this programme to dry together the synthetic and cotton laundry items and the laundry items made of mixed fabrics.

#### • **Wool refresh**

Use this programme to ventilate and soften the woollen laundry that can be washed in the washing machine. Do not use to dry the laundry completely. Take out and ventilate the laundry immediately after the programme is over.

#### • **Shirt 30'**

Use this programme to make 2 shirts ready for ironing in 30 minutes.

#### • **Lingerie**

Use this programme to dry 100% synthetic and synthetic blended satin underwear (nightgown, brassiere, underpants, pyjamas) that bear the "machine-dryable" mark on its garment tag.

**i** Level of dryness may change depending on the blend of the garment, type of knitting and dampness level.

**i** Garments that contain accessories such as lace, tulle, gems, beads, scales, wire and etc., and garments with high silk content should not be dried in the machine.

**i** Silk garments that contain cotton or has a satin appearance may remain wet when they are dried with this programme.

#### • **Viscose**

Use this programme to dry viscon and modal mixed laundry. Viscose-polyester, viscose-cotton blended products can be dried.

**i** Level of dryness may change depending on the blend of the garment, type of knitting and dampness level.

**i** It is not recommended to dry garments and evening gowns that contain accessories such as lace, tulle, gems, and etc..


#### • **Refresh**

Only ventilation is performed for 10 minutes without blowing hot air. You can air the clothes that have been kept at closed environments for a long time and deodourise unpleasant odours thanks to this programme.

#### • **Timer programmes**



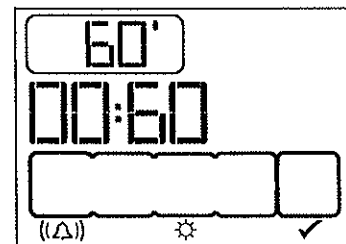


You can select one of the 10 min., 20 min., 30 min., 40 min., 50 min., 60 min., 80 min., 100 min., 120 min., 140 min. and 160 min. timer programmes to achieve the desired final drying level at low temperatures.

**i** With this programme, the machine dries for the time selected regardless of the dryness level.



## Programme selection and consumption table

EN

Programmes	Capacity (kg)	Spin speed in washing machine (rpm)	Approximate amount of remaining humidity	Drying time (minutes)
<b>Cottons / Coloreds</b>				
 Extra dry	8	1000	% 60	160
 Cupboard dry	8	1000	% 60	145
 Iron dry	8	1000	% 60	115
Shirt 30'	0.5	1200	% 60	30
Shirts	1.5	1200	% 50	40
Jeans	4	1200	% 50	100
Bedding	2.5	1000	% 40	120
Mix	4	1000	% 60	95
Sportswear	4	1000	% 60	90
Viscose	1.5	600	%100	90
Lingerie	1	800	% 40	40
Wool Refresh	1.5	600	% 50	8
<b>Synthetics</b>				
 Cupboard dry	4	800	% 40	60
 Iron dry	4	800	% 40	45
<b>Energy consumption values</b>				
Programs	Capacity (kg)	Spin speed in washing machine (rpm)	Approximate amount of remaining humidity	Energy consumption value kWh
Cupboard dry for cottons*	8	1000	% 60	1.92
Iron dry for cottons	8	1000	% 60	1.50
Cupboard dry for synthetics	4	800	% 40	0.75
Contains fluorinated greenhouse gases covered by the Kyoto Protocol. Hermetically sealed.R407c/0,340kg				

\* : Energy Label standard programme (EN 61121:2012)


All values given in the table have been fixed according to EN 61121:2012 Standard. These values may deviate from the values in the table according to the laundry type, aundry spin speed, environmental conditions and voltage fluctuations.

## Auxiliary functions

### Audio Warning

The machine will give an audio warning when the programme comes to an end. If you do not want the machine give an audio warning, press the Volume Level button repeatedly until “x” appears on the display. Use the same button to adjust the volume level.

**i** You can activate this function either before or after the programme starts.

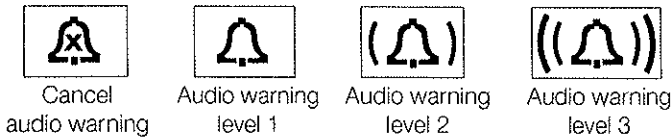

### Dryness level


Used to adjust the required dryness level. More drying is performed compared to the default settings when “+” sign appears and less drying is performed when “-” sign appears. Programme duration can change depending on the selection.

**i** You can activate this function only before the programme has started.



### Anti-creasing

You can use Anti-creasing function to prevent laundry from creasing if you will not take the laundry out after the programme has come to an end. This programme rotates the laundry every 240 second for 2 hours to prevent creasing. Anti-creasing is activated but the programme is still running in the first display image below. Drying cycle is completed and the Anti-creasing step has started in the second display image.

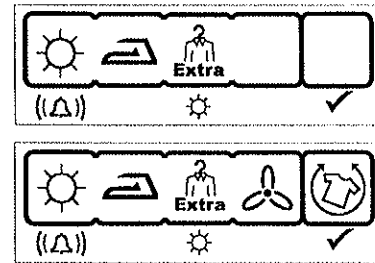

**i** Press Anti-creasing button to activate this function.

### Changing the contrast

Adjust the display contrast in order to make the symbols on the display appear clearer. It may particularly be necessary to change the contrast setting of the display when the dryer is installed over a washing machine.

Press and hold the Spin Speed / Timer Programme button for 3 seconds. When the contrast is changed, all symbols on the display will appear for 3 seconds in order to indicate that the process is complete.

**i** Perform the same procedure to revert back to the previous contrast setting.


### Warning symbols

**i** Warning symbols may differ according to the model of your machine.

### Lint filter cleaning

When the programme is completed, a warning symbol will appear to remind that the filter needs to be cleaned.

**i** If the Filter Cleaning symbol flashes continuously, refer to “Troubleshooting” section.

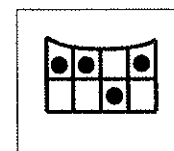

### Water tank

When the programme is completed, a warning symbol will appear to remind that the water tank needs to be drained. If the water tank becomes full while the programme is running, the warning

