

JVC

 
Quick Start Guide

40" LED Smart HD TV

LT-40C750

Thank you for purchasing your new JVC TV.

Your new TV incorporates the latest technology to enhance your viewing experience. We would suggest that you allow about 20 mins for initial setup. Please follow this guide for a successful first time installation.

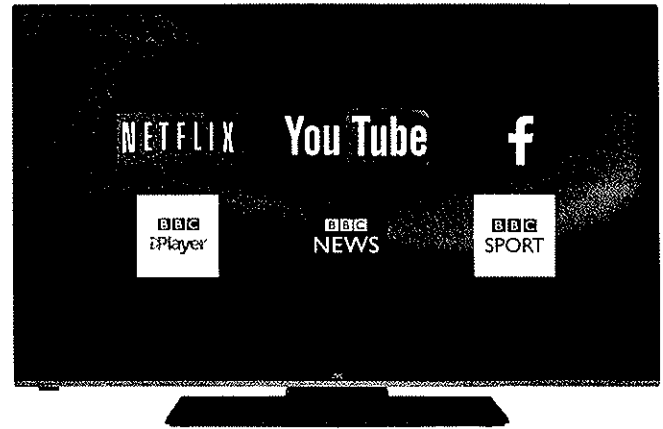

The latest eco-friendly power-saving technology will switch off the TV if it is left on and idle for 4 hours. Please refer to "Auto Standby" under the "Time Settings" section of the instruction manual for more detail.

1 Unpacking

Remove all packaging from the unit. Retain the packaging. If you dispose of it please do so according to any local regulations.




- | | | |
|--|--|--|
| <input checked="" type="checkbox"/> TV | <input checked="" type="checkbox"/> AAA Batteries x2 | <input checked="" type="checkbox"/> FAV Cable |
| <input checked="" type="checkbox"/> TV Stand | <input checked="" type="checkbox"/> Screws x 4 | <input checked="" type="checkbox"/> Instruction Manual |
| <input checked="" type="checkbox"/> Remote Control | <input checked="" type="checkbox"/> YPbPr Cable | <input checked="" type="checkbox"/> Quick Start Guide |



Please inspect your TV for damage after unpacking. If you do notice any damage please consult your dealer.


2 Operating Your Remote Control

   - Slide open the battery compartment on the back of the remote control.
- Insert two AAA size batteries. Make sure to match the (+) and (-) ends of the batteries with the (+) and (-) ends indicated in the battery compartment.
- Slide the battery compartment cover back into place. Make sure it clicks into place.

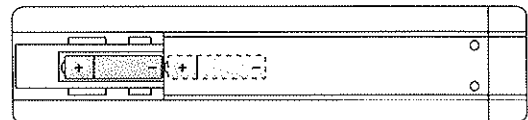


3 Installing the TV Stand

 1. Ensure the TV is switched off and not connected to the mains power supply.
2. Lay the TV down on a flat surface ideally on the edge of a table so the base of the TV slightly overhangs the edge of the table, with the back side facing up. Please make sure a soft cushioned material (such as a dry bath towel or thick piece of foam) is placed beneath the screen.

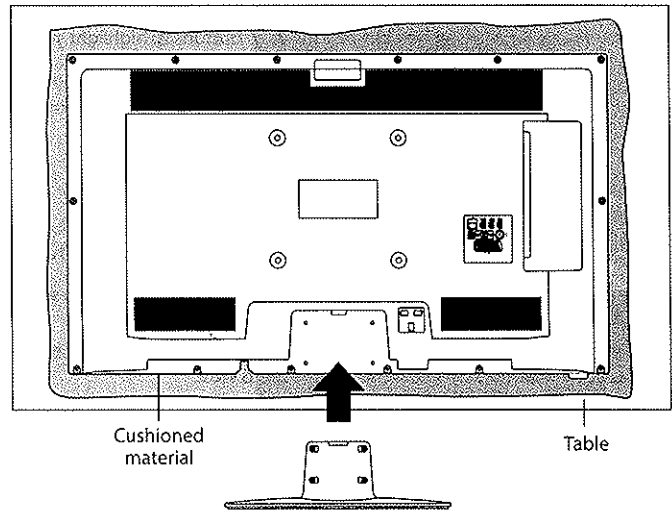

 3. Slide the stand under the lip, the neck will fit snugly over the screw holes. Then screw the stand to the TV using the 4 screws supplied.

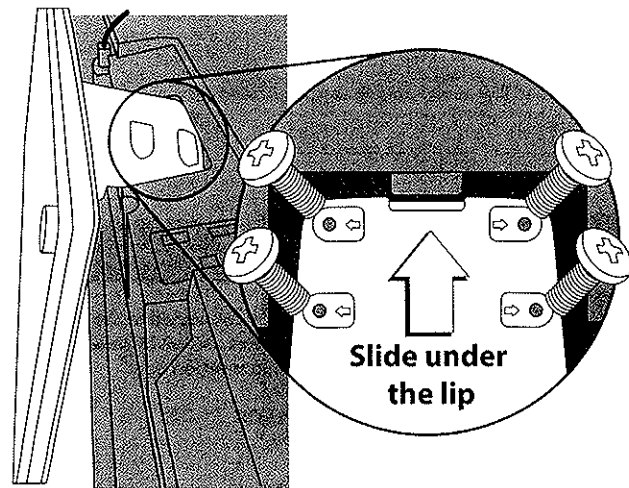


! The LCD display is very fragile, and must be protected at all times when installing and removing the base stand. Be sure that no hard or sharp object, or anything that could scratch or damage the LCD display, comes into contact with it. DO NOT exert pressure on the front of the TV at any time because the screen could crack.

4 Connecting the Aerial and Turning on the TV

1. Connect one end of the RF coaxial cable to the aerial socket on the wall and the other end of the cable to the **ANT** socket on the back of your TV.
2. Plug the TV into a mains socket and switch on at the mains.
3. In standby mode, press the **⏻** button on the remote control to turn the TV on. The LED indicator will flash for a few seconds then the TV will switch on.

Optional


 
If you want to connect to the internet via a wired connection then connect your ethernet cable to the **LAN** socket.

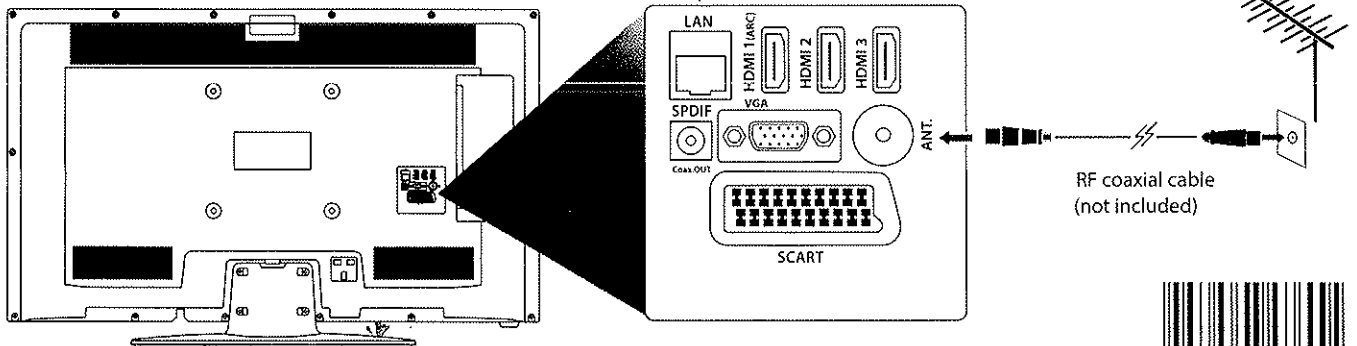

- !**
- Do not connect the TV to the mains supply until you have completed all the connections.
 - Always disconnect the TV from the mains socket when not in use for a long period of time.
 - The **⏻** button on the remote control is only used for switching the TV into standby, it does not disconnect the TV from the mains power. To completely disconnect the mains power, please remove the mains plug from the mains socket.

5 Getting Started

  1. The first time you turn the TV on, it will go straight into the **First Time Installation** menu. Please ensure the aerial is plugged in. Press the ▲▼ buttons to highlight your language then press **OK**.
2. Press the ◀▶ buttons to select your country.
3. Press the ▼ button to highlight Search Type, then press the ◀▶ buttons to select Digital Only. This will only search for the digital channels.
4. Press the ▼ button to highlight Teletext Language, then press the ◀▶ buttons to select your language. The majority of people will want this set to West.
5. Press the ▼ button to highlight Scan Encrypted Channel (pay-per-view channels), then press the ◀▶ buttons to select Yes or No.
6. Confirm these settings by pressing **OK**.
7. Press the ◀▶ buttons to highlight Home Mode then press **OK**.

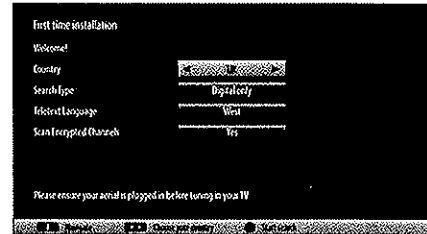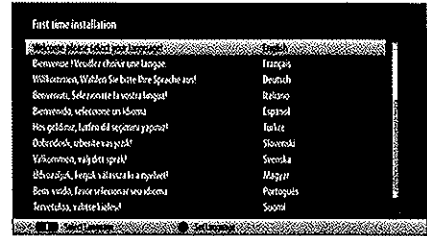

6 Connecting to the Internet

To access all the features of your Smart TV you must be connected to the internet. If you do not wish to set up your network connection you can skip this section by selecting NO, however we recommend you select Yes and set up your network connection now.

- Press the ◀▶ buttons to highlight YES then press **OK**.

 
 
 
WIRED Connection

- If you have connected your ethernet cable to the LAN socket on the back of your TV press the ◀▶ buttons to select WIRED DEVICE. When Network says ENABLED press the **OK** button.

WIRELESS Connection

You can connect using a wireless connection via your router.

1. Press the ◀▶ buttons to select WIRELESS DEVICE.
2. Press the **YELLOW** button to scan for your wireless network (router). A message saying 'Please wait' will appear while your TV searches for all the wireless networks in your area.
3. Press the ▲▼ buttons to select your wireless network then press **OK**.
4. You now need to enter your password, a keyboard will appear. Press the ◀▶▲▼ buttons to select a letter/number/symbol and press **OK** to enter each one. Once you have typed your password highlight **OK** and press **OK**. The network will now show ENABLED.
5. Press the **OK** button to continue.

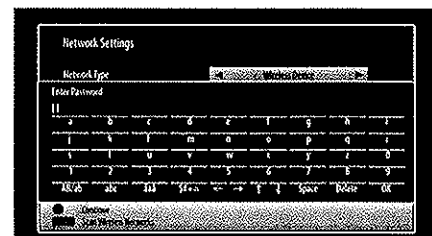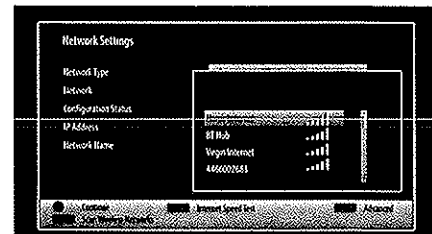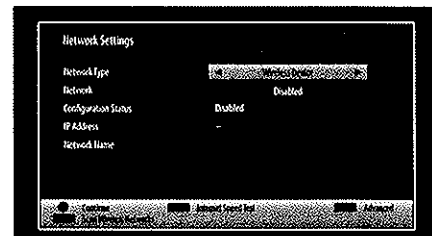

7 Tuning in Your TV

 
You will now be asked if you want to start automatic channel scan.

Viewing TV Through a Set Top Box

If you have attached a Set top box such as **Sky/Virgin** or **BT** via a HDMI cable you can skip this section by selecting **NO**. To view your set top box press the **SOURCE** button and select the HDMI socket you have attached your set top box to.

Viewing TV Through an Aerial



1. Press the ◀▶ buttons to select **YES** then press **OK**.
2. You now need to choose **AERIAL** or **CABLE**, most people will have connected an aerial so press the ◀▶ buttons to select **AERIAL** then press **OK**. Your TV will now start to tune in all available channels. This may take a few minutes.

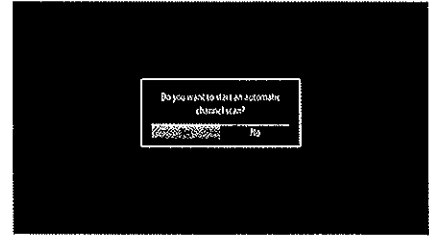

Choose Region (UK only)

During tuning, your TV may have received signals from more than one transmitter. If this has occurred the Choose Region screen will be displayed. This will enable you to select the correct regional transmission for the local news service that you require.

  1. Press the ▼ button to highlight **Primary region**, then press the ◀▶ buttons to select your Primary Region e.g. England.
2. Press the ▼ button to highlight **Secondary region**, then press the ◀▶ buttons to select your Secondary Region e.g. London.
3. Press the ▼ button to highlight **Tertiary region**, then press the ◀▶ buttons to select your Tertiary Region e.g. Greater London.
4. Press the ▼ button to highlight **OK** then press **OK**. Your TV is now fully tuned in.
5. The Edit Channel list will appear, press the **EXIT** button to remove this. Your TV is now fully tuned in and ready to use.

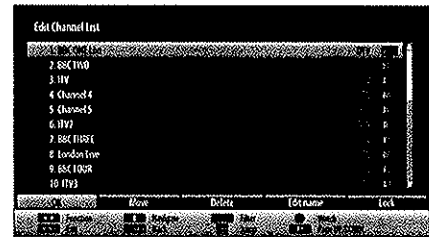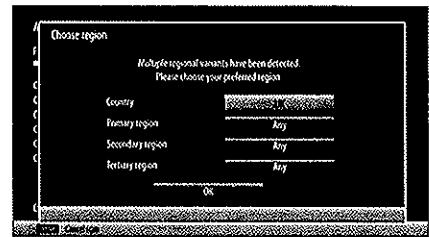

Need More Help!

If you need more help setting up your TV then please call:

UK: 0344 561 1234
Ireland: 1890 818 575

Lines are open 24/7

Well done, your new TV is now ready to use. You will find that there are many exciting features available. To get to know all these features, please take some time to read the instruction manual provided with your TV.

(QSG-LT-40C750-150115V1)